


Add Brake Linings to Old Shoes

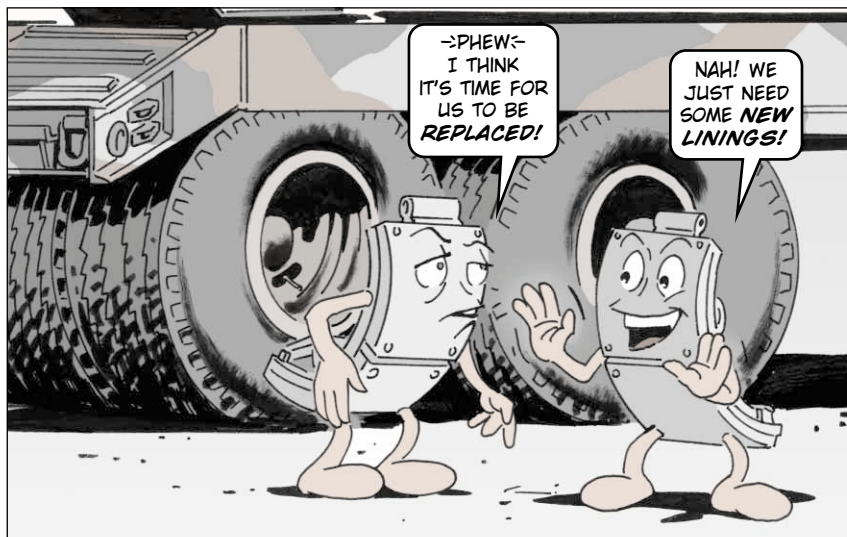

Since brake shoe assembly, NSN 2530-00- 678-6133, is no longer available for M172A1 semitrailers, you might want to reuse the bare metal shoe with new linings.

That's because a new bare shoe, NSN 2530-00-378-9036, costs more than \$280.

So get together with your direct support folks since it's their job to remove the old linings and add new ones. They'll use the following parts on each wheel:

Item	NSN
Friction lining (4)	2530-00-678-6135
Wear plate screw (8)	5305-00-958-5253
Wear plate (4)	2530-00-678-6128
Hex nut (16)	5310-00-732-0559
Lock washer (16)	5310-00-194-1483
Bearing sleeve (4)	3120-00-427-2213
Machine screw (16)	5305-00-053-1102

If you need a new brake drum, use NSN 2530-00-204-3214. The NSN is missing from Item 19 of Fig 16 in TM 9-2330-211-14&P.

You can't get entire assembly, so have DS order parts and re-line old shoes

